



SIP PA Gateway

Quick Installation Guide


X10



Packing List




X10 SIP Paging Gateway(1)

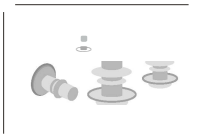


M4*10 Clamping Screws(4)



Phoenix Connector(1)

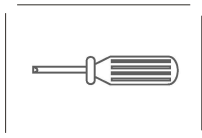


Mini Screw Driver(1)

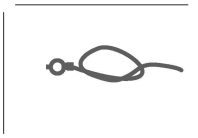

Grounding Cable(1)



Quick Installation Guide(1)

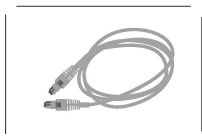

Network Cable(1)



Warranty Card (1)


English

System Login Wizard


1. Connect X10 to DC adapter or PoE network cable.
2. After start-up, press the volume+ button and volume- button simultaneously for about 3 seconds. Then X10 will play the IP address as it's DHCP by factory default settings. If it's failed to get the IP address, please use the default IP address 192.168.1.101. You can login X10 Web GUI with that IP address via your browser. The default username and password both are admin.

Installation


1. Drill 4 holes on the mounting rack for M4 Clamping Screws as per 143*46mm as below dimension diagram.
2. Fix X10 into the mounting rack via M4*10 Clamping Screws.
3. Connect X10 with DC power, network cable, phoenix connector and grounding cable.

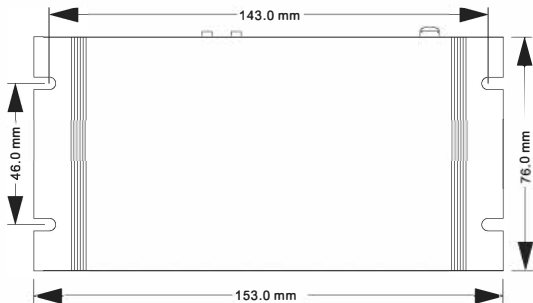

Interfaces

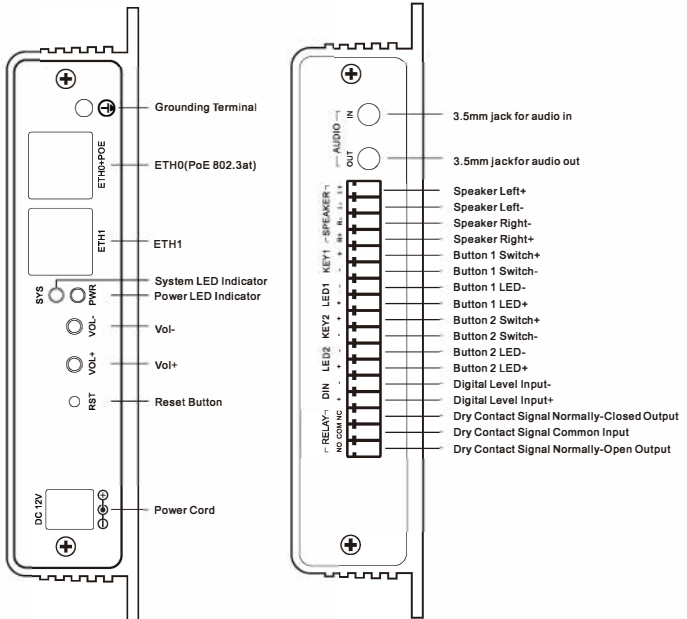

Wiring method

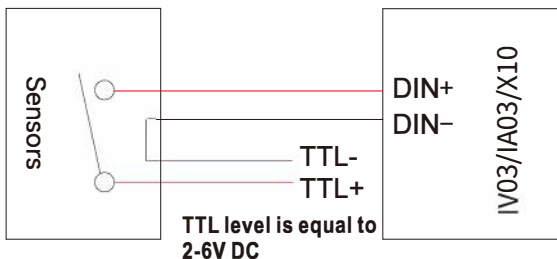

Restore Factory Settings

Press the Reset button for more than 5 seconds, and release it until X10 plays the voice prompt. X10 system will reboot, and the system LED goes out. After factory settings are successfully restored, the system LED will be flashing.



Официальный дистрибутор в России и СНГ ООО «ТМС»
Россия, 117519, Варшавское шоссе, дом 133, офис 370
Телефон: +7 (495) 723-81-21 | +7 (495) 723-33-33 (7/24)
E-Mail: sales@tmc.ru | support@tmc.ru